

PFCTF

| | |
|----------|-------------------|
| A | Βρυσάκι Φίλτρου |
| B | Βάση Φίλτρου |
| C | Ποτήρι Φιλτροθήκη |
| D | Επιλογέας Φίλτρου |
| E | Νίπελ Σύνδεσης |
| F | Βρύση Κουζίνας |

Τοποθέτηση

1. Πριν την τοποθέτηση, ελέγξτε ότι όλα τα εξαρτήματα είναι σφικτά βιδωμένα. Τοποθετήστε το βρυσάκι (A) μέσα στην εσοχή(B).
2. Αφαιρέστε ότι εξάρτημα υπάρχει πάνω στη βρύση (F), π.χ την σίτα
3. Εάν οι σπειρώσεις της βρύσης είναι εσωτερικές τοποθετήστε το νίπελ σύνδεσης (μαζί με τη φλάτζα του).
4. Εάν οι σπειρώσεις της βρύσης σας είναι εξωτερικές, απλά βιδώστε τον επιλογέα (D) πάνω στη βρύση της κουζίνας σας.

Τεχνικές προδιαγραφές

Διαστάσεις (Ύψος x Διάμετρος): 330 mm x 115 mm
 Προσαρμογέας βρύσης: 1/2"
 Θερμοκρασία Λειτουργίας: 2°C - 23°C (35°F - 73.4°F)

Αντικατάσταση Φίλτρου

1. Κλείστε την παροχή νερού.
2. Ξεβιδώστε την ποτηροθήκη με το χέρι ή με το ειδικά κατασκευασμένο κλειδί (FKWR1-BL) και βγάλτε το φίλτρο.
3. Πλύνετε καλά το εσωτερικό του περιβλήματος του φίλτρου με νερό.
4. Αφαιρέστε το προστατευτικό νάilon από το ανταλλακτικό φίλτρο.
5. Βάλτε βαζελίνη στο O-ring στεγανοποίησης.
6. Τοποθετήστε το φίλτρο μέσα στην ποτηροθήκη (βεβαιωθείτε ότι το τοποθετείτε με την σωστή φορά).
7. Βεβαιωθείτε για τη σωστή θέση του ελαστικού δακτυλίου του φίλτρου housing.
8. Βιδώστε την ποτηροθήκη με το χέρι ή με το ειδικά κατασκευασμένο κλειδί

✳ Το φίλτρο πρέπει να αντικαθίσταται κάθε 6-12 μήνες ή μετά από φιλτράρισμα 4000-10000 λίτρων νερού.(Ανάλογα με τον τύπο του φίλτρου)
 Σε περίπτωση πτώσης της πίεσης του νερού ή μείωσης της ποιότητας του νερού, ενδέχεται να απαιτείται έγκαιρη αντικατάσταση του φίλτρου.




POSEIDON FILTER

Email: poseidonfilter@gmail.com

Διεύθυνση: Φιλίππου 7, Δράμα

Τηλ.: 2521401645

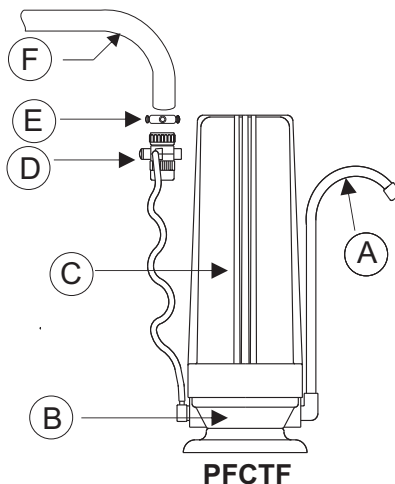

| | |
|----------|--|
| A | Filter faucet |
| B | Filter head |
| C | Filter housing |
| D | Faucet adapter with sliding valve FXFMP |
| E | Universal adapter |
| F | Faucet sink |

Installation

1. Prior to installation, check if all filter components are firmly tightened. Insert filter faucet (A) into the elbow of the filter head (B).
2. Remove any end pieces from the sink faucet (F), e.g. a faucet strainer.
3. If your sink faucet is threaded on the outside (standard "male" type thread 7/8"), mount filter connector using a rubber O-ring.
4. If your sink faucet is not threaded or the thread is non-standard, use a faucet adapter (FXFMP) first. Mount it to your sink faucet and then install the filter connector (as in step 3).

Technical specifications

Dimensions (Height x Diameter): 330 mm x 115 mm

Faucet adapter: 1/2"

Working Temp.: 2°C - 23°C (35°F - 73.4°F)

Cartridge replacement

1. Shut off water supply valve.
2. Unscrew the filter housing by hand or by using a universal filter wrench (FXWR1-BL) from the filter head and remove used cartridge.
3. Wash the inside of filter housing thoroughly with warm water.
4. Remove protective foil from replacement cartridge.
5. Grease rubber O-ring with technical vaseline.
6. Place replacement cartridge inside the filter housing (ensure to place it polypropylene fiber side up).
7. Ensure proper position of the rubber O-ring of cartridge and the filter housing.
8. Screw by hand filter housing with the filter head. To prevent damage to the thread or O-ring, be sure not to over tighten.

*Cartridge must be replaced every 6-12 months or after filtering 4000-10000 liters of water. In case of water pressure drop or water quality decrease, early cartridge replacement may be necessary.



POSEIDON FILTER

Email: poseidonfilter@gmail.com

Διεύθυνση: Φιλίππου 7, Δράμα

Τηλ.: 2521401645